Electric pressure cooker

XP-A4 XP-A5 XP-A6
YLG-D40 YLG-D50 YLG-D60

an instruction manual

Please read this manual carefully before use
Common to all models of the company

product mix

Float valve

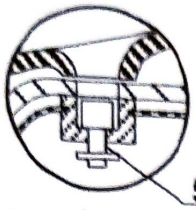

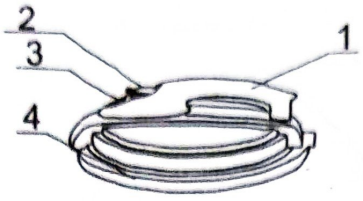

Assembly drawing

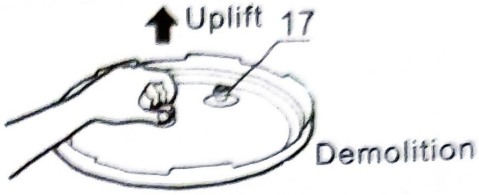

Installation and disassembly drawing of water collecting box

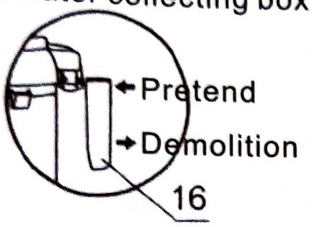

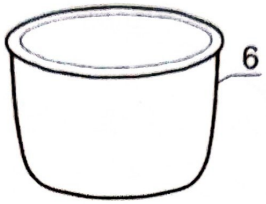

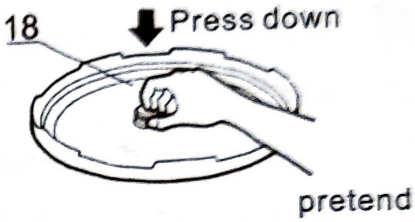

Control panel

Attachment

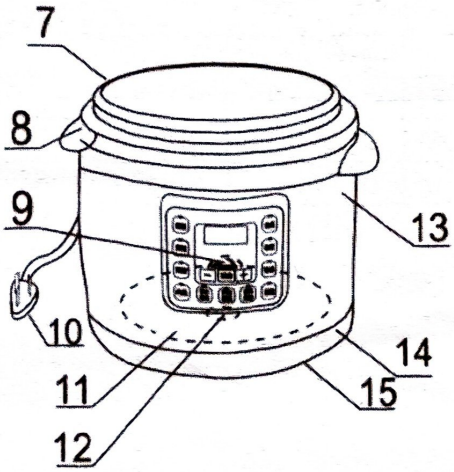

Control panel

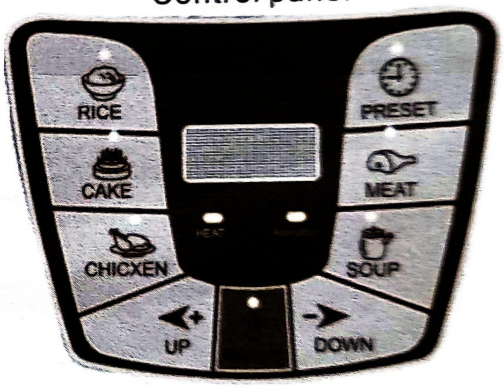

Attachment

Measuring Cup

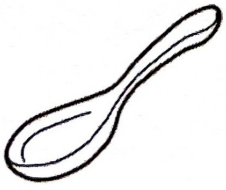

Ladle

Note: the product in kind shall prevail!

1. handle
2. Pressure limiting vent valve
3. float valve
4. lid
5. float
6. inner pot
7. middle level
8. handle
9. Control panel
10. power line
11. heating plate
12. sensor
13. shell
14. base
15. floor
16. water collecting box
17. Sealing ring of float valve
18. anti clogging cover

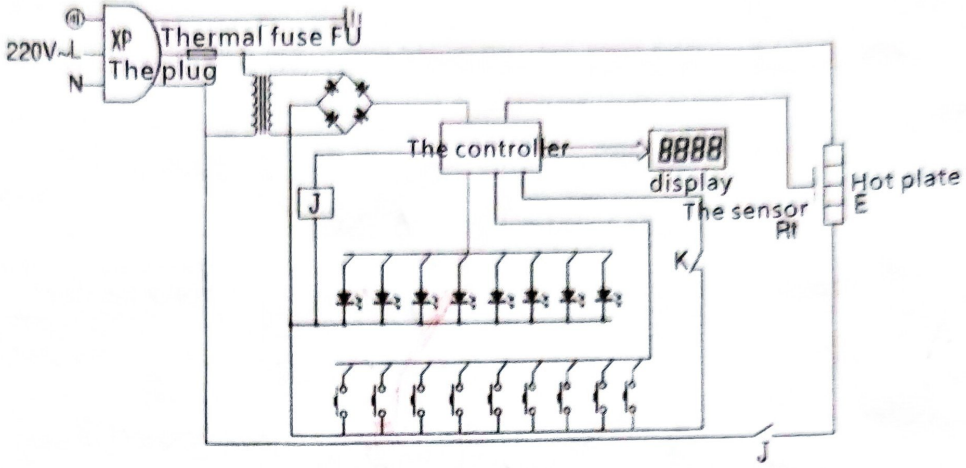

Display code	E1.E2	E4
fault	Sensor fault	Pressure switch failure

Pot function display table

Function	Default time (hold pressure)	Adjustable time (hold pressure)	Available time
Cook	10 minutes	1 min to 29 min	0 to 24h
Porridge	15 minutes	1 min to25 min	0 to 24h
Soup	13 minutes	1 min to 23 min	0 to 24h
Meat	15 minutes	1 min to 25 min	0 to 24h
Steamed chicken	22 minutes	1 min to 30 min	0 to 24h
Tendon	40 minutes	1 min to 50 min	0 to 24h
Cake	13 minutes	1 min to 22 min	0 to 24h
Hot milk	3 minutes	1 min to 15 min	0 to 24h
Hot rice	3 minutes	1 min to 17 min	0 to 24h
Fish	6 minutes	1 min to 13 min	0 to 24h

Instructions

1. Open the cover. Hold the handle of the lid first, turn the lid clockwise to the open position, and then lift the lid upward. (See Figures 7 and 8)

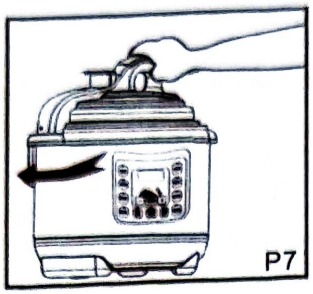
P7

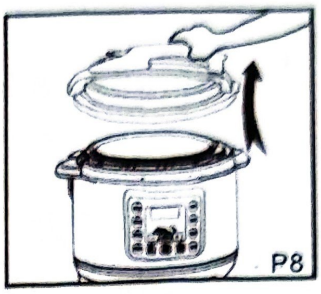
P8

2. Take out the inner pot and put food and water into the inner pot. Food and water must not exceed 4/5 of the height of the inner pot; easily swellable foods in water should not exceed 3/5 of the height of the inner pot (especially when cooking porridge, kelp, seaweed, etc.);Food and water should not be less than 1/5 of the height of the inner pot. (See Figures 9, 10, 11)

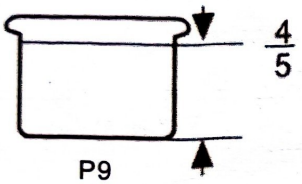

P9

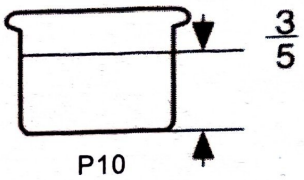

P10

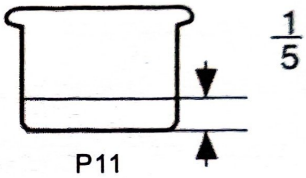

P11

* 2L3L maximum boiled rice is 4 cups of rice and 6 cups of rice.
* 1 cup of rice with a glass of water, users can adjust the amount of water according to different rice quality and personal taste.

3. Put the inner pot into the outer pot. Before putting it in, wipe the inner pot and the heating plate clean, and do not put debris inside the outer pot and the surface of the heating plate; after putting it, gently rotate the inner pot left and right to keep the inner pot and the heating plate in good contact.
(See Figure 12)Close the cover.

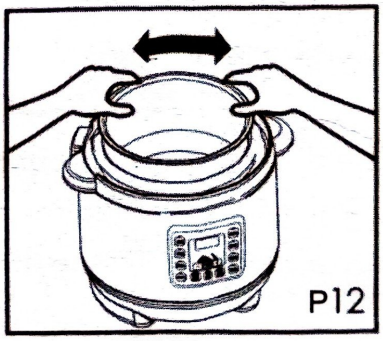
P12

4. Check whether the sealing ring has been put into the lid.Rotate the seal ring by hand to make it free and even.Hold the handle of the lid tightly with your hands, align the limit edge of the lid opening position, and turn it counterclockwise to the limit edge of the lid. Then you hear a "click" sound, and the lid closes smoothly. (See figures 13, 14)

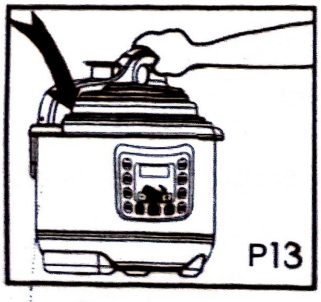
P13

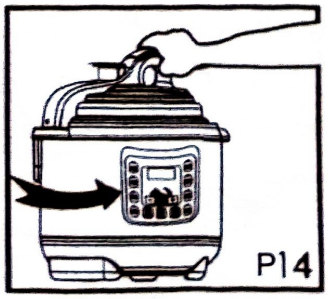
P14

5. Place the pressure-limiting air release valve, and according to the figure, move the air release valve to the "sealing" position nearby. And check whether the float falls (the float valve falls before unheated work). (See Figures 15 and 16)

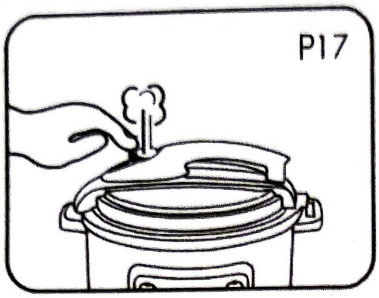

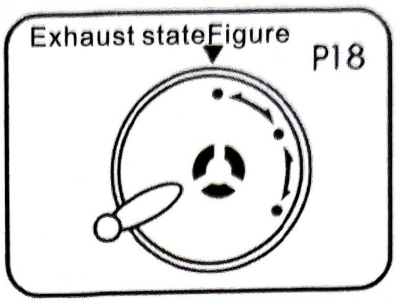

6. Turn on the power, the display shows " 0000 "

7. Insulationa
A.fter each function countdown is completed, it automatically enters the insulation state, and the insulation light is on
B. The food in the pot needs to be kept warm. Just press "Insulation" and keep the temperature in the pot constant.Keep between 45 ℃ -55 ℃.

8. Make an appointmentPress the "Function" key, the "Function" key lights up, and then press the "Reservation" key, which displays 00:30 or 30 min. If you need to increase the reservation time, press the "Ten" key repeatedly. Each time you press it, it will increase 30 minutes, and so on! Otherwise, press the "-" button

9. If you select the menu, press the "Function" key to automatically display the default.If you need to increase the pressure holding time, press the "+" key, if you need to reduce it, press the "-" key(can be arbitrarily added or subtracted according to your own taste and experience) The "function" key light flashes for 5 seconds, then lights up Enter the working state.

Precautions

1. It is forbidden to put the product in flammable materials and humid environment, and prohibit children to operate or approach.
2. The seal ring cannot be damaged, cannot be replaced with other rubber rings, and the tension ring cannot be used to increase the seal. When replacing the seal rubber ring, it is recommended to purchase accessories of the same specifications.
3. The anti-blocking cover should be cleaned frequently to prevent blockage. Removable aluminum cover plate and sealing ring for flushing (refer to product structure 17)
4. Do not forcibly open the cover when the float valve is not dropped. The pressure valve must be turned to fully discharge the air pressure before opening the cover.
5. The pressure-limiting air release valve shall not add any heavy objects or replace with other objects.6. The maximum heat preservation time is 24 hours, and it should not exceed
6 hours when used to avoid affecting the cooking effect.
7. During the heating and cooking process, a large amount of exhaust occurs around the lid, which is an abnormal working phenomenon. At this time, the pressure relief safety device is protected.
8. Please unplug the power plug immediately, suspend the use, and send it to our maintenance point for inspection. In the process of use, if a malfunction occurs, please suspend use and send it to our maintenance point for inspection.
9. When moving the product, please carry the handle, do not lift the lid handle.
10. Please do not disassemble the product yourself or replace it with other parts. The product can only use our spare parts.
11. When cooking or just finishing cooking, do not touch other parts except the handle and operation panel, especially the stainless steel cover to prevent burns.
12. When there are foreign objects (such as rice grains) on the heating plate, after the heating plate is cooled, use fine sandpaper or blunt to remove debris, and do not damage the surface of the heating plate.

Common faults and Solutions

Serial number	Phenomenon	Reason	Processing method
1	Chalazal difficulty	Sealing ring not in place	Put the sealing ring in place
		Float valve stuck push rod	For nudging the push rod
2	Difficult to open the cover	Float valve does not fall after venting	Use chopsticks to gently press the float valve
3	Air leakage of boiler cover	Sealing ring not put on	Put on the sealing ring
		Food residue on sealing ring	Clean the sealing ring
		Wear of sealing ring	Replace sealing ring
		Cover not closed	Close the cover as required
	Air leakage of float valve		Clean the sealing ring of float valve
			Replace the sealing ring of float valve
	Float valve cannot rise		Put food and water as required
			Send to maintenance point for maintenance
	Leakage of pressure limiting valve		Turn the pressure limiting valve to the sealed state
			Clean the steam water in the pressure limiting valve

Precautions for use: when using the electric pressure cooker, there will be a small amount of gas overflowing from the pressure limiting valve or float valve in the cooking process. This phenomenon belongs to the normal working state. Please feel free to use.

It is normal to use it for the first time

Directory

1.caveat P1
2. Product Structure P2
3. the electrical schematic P3
4. Opening and closing the lid P3
5. pressure cooker function display table P3
6. How to use P4
7. matters needing attention P5
8.common faults and treatment P6
9. warranty card P7

Capacity	Power Supply	Power	Caliber	Working pressure	Pressure limiting pressure	Insulation temperature	Holding time
4L	220V~50Hz	800W	20CM	0-80kPa	90kPa	60-80℃	0.5-8
5L	220V~50Hz	900W	22CM	0-80kPa	90kPa	60-80℃	0.5-8
6L	220V~50Hz	1000W	22CM	0-80kPa	90kPa	60-80℃	0.5-8

caveat

1. This appliance should not be used by the following people (including children): those who are physically, sensory or mentally deficient, or who lack experience and knowledge, unless they are under the supervision of the person responsible for their safety regarding the use of this appliance or Guidance, children are prohibited to operate or approach when using, this appliance can not allow children to play, so as to avoid danger.
2. When you deflate the pressure-limiting air release valve, please do not put your hand or face close to the exhaust hole of the pressure-limiting air release valve.
3. The lid does not reach the cooling state when working or after the end, please do not touch the lid with your hands to avoid scalding.
4. It is forbidden to block the periphery of the joint between the lid and the outer pot with a rag, so as not to affect the safety.
5. After cooking, the power must be cut off before consumption.
6. When there is still air pressure in the pot, the cover cannot be forcibly opened to prevent accidents. The air pressure valve should be turned to the exhaust position to fully evacuate the air pressure in the pot, and then open the cover.

**This product is designed and manufactured according to household standards.
Do not use it for commercial or industrial purposes.**